


## Remote Clear


The C Plus II and III main display is cleared by means of the clear button on the front panel. On the back of the C Plus there are connections available for a remote clear circuit. A foot switch can be easily attached to these connections allowing a dispatcher to clear the display without reaching for the C Plus.

### Connecting the C Plus to a remote clear switch

The circuitry associated with remote clear is shown below. This circuit is necessary to protect sensitive components from external forces.

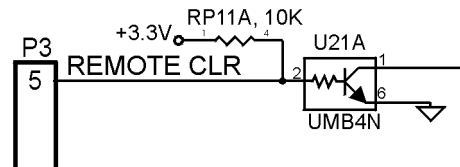

The line is pulled high to 3.3VDC and must be grounded to activate the circuit. The external switch must be "Normally Open", momentary.

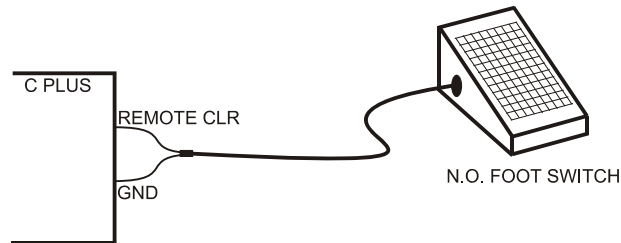

### Additional Information:

The C Plus III personality has different display formats available which are selected in the programming mode. If "Taxi Bid" mode is selected, the clear and remote clear erases both the main window and the secondary window of the display. If "Scrolling" mode is selected, the clear and remote clear erases only the main window. The secondary window is erased by holding down the review button while pressing the clear or remote clear button.